

Castle Winch, LLC



Lightning Lights

Operation:

1. Press the On/Off switch to turn on the unit.
2. The light will flash any time the trigger is not aligned with the internal sensor. The sensor is located directly across from the On/Off switch. Align the trigger with the sensor to set the bite indicator.
3. Make sure to turn off the unit when not in use, or in storage/transport.

General Notes:

- Replacement Battery Size: A23
- Use caution not to overtighten the screws.
- Each light includes two triggers. One is a spare.
- The ideal distance between the light housing and the trigger magnets is ~3/16".

Mounting Instructions:

Ultimate Outdoors (Standard Arm):

Install four screws on the bottom to clamp onto the arm. Locate the unit so that the switch aligns with the trigger magnets.



Trigger snaps into any "O" on the rattle reel. The side with the magnets faces the sensor.

NOTE: Adjust the hex nuts on the rattle reel axle bolt to obtain the proper spacing between the light housing and the trigger magnets (~3/16").

Ultimate Outdoors / Rigid Mount



Trigger snaps into any "O" on the rattle reel. The side with the magnets faces the sensor.

NOTE: Adjust the hex nuts on the rattle reel axle bolt to obtain the proper spacing between the light housing and the trigger magnets (~3/16").

Ultimate Outdoors / UnderCover Guide:



Trigger snaps into any "O" on the rattle reel. The side with the magnets faces the sensor.

Install two screws through the holes closest to the hinge.

NOTE: Adjust the hex nuts on the rattle reel axle bolt to obtain the proper spacing between the light housing and the trigger magnets (~3/16").


Fish Hole Buddy / Lindell / ClamLock:



Install five screws on the bottom to clamp onto the arm. Locate the unit so that the housing is ~3/16" away from the trigger magnets.

Trigger fits over lip of rattle reel.

Rattlesnake:

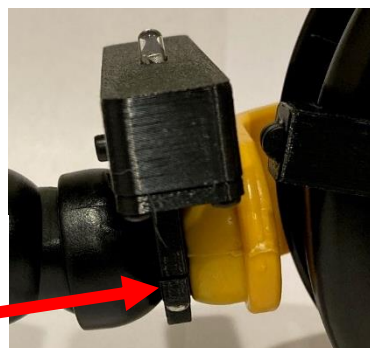

Install two screws on the bottom to clamp onto the arm.



Trigger fits over lip of rattle reel.